

WPM

WELHOME PRO

MILK
STEAMER
MS-130T

Instruction Manual



CAUTION



 
Please take out the red rubber stopper at the bottom of water tank before use

Content

Content.....	01
Features of MS-130T.....	02
Control Panel.....	03
Operation Guidelines of MS-130T.....	03-05
Recipes	06
Welhome 's Safety Precautions.....	06-08
Care and Cleaning.....	09-10
Product Specifications	10

Thank you for purchasing Milk Steamer, MS-130T, by WPM.
Please read this manual carefully before using.

Features of MS-130T

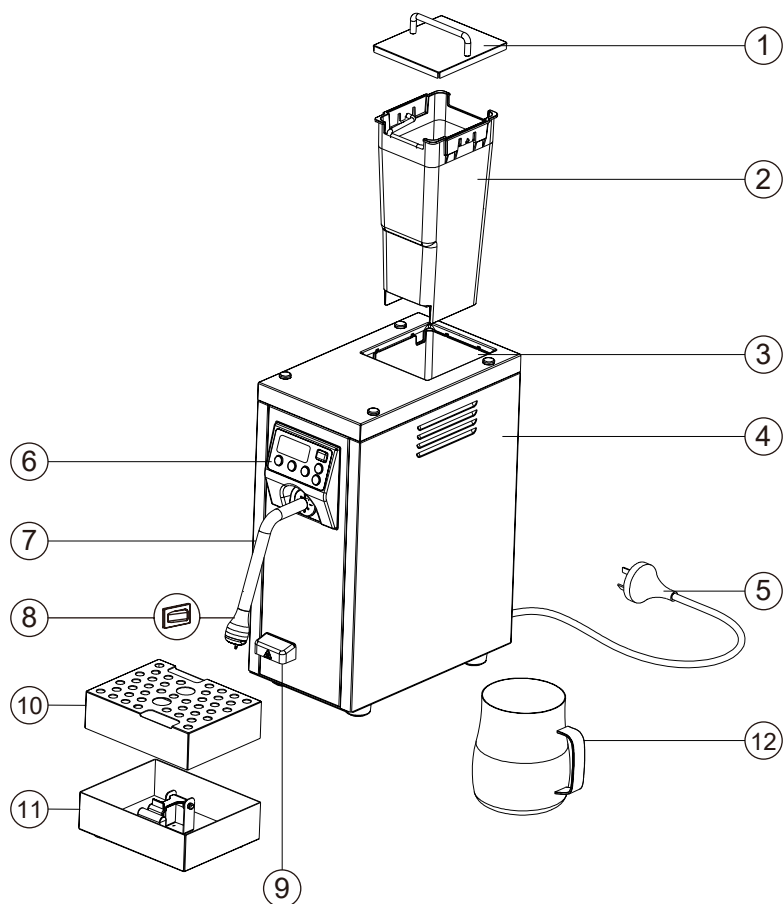

- | | |
|-------------------------|-------------------------------|
| 1. Tank Lid | 8. Main Power Switch |
| 2. Removable Water Tank | 9. Pressure Outlet |
| 3. Tank Entry | 10. Removable Drip Tray Cover |
| 4. Steamer Body | 11. Removable Drip Tray |
| 5. Power Cord | 12. Stainless Steel Pitcher |
| 6. Control Panel | |
| 7. Anti-heat Steam Wand | |

 
Welhome professional milk steamer is comparable to commercial milk steamer machine, regard ing to the appearance, performance, and quality. Customer will be capable to make professional beverage.

Professional milk steamer machine is made of high quality stainless steel which provide durable and modern style.
Regarding to the features, it is uniquely equipped with a high-efficient heater for generating strong and prolonged steam.

High-efficiency Heating System

This milk steamer contains a 4-bar pressure pump for generating steam. With a high-efficient heater, it is capable to generate continuous and powerful steam.

Control Panel

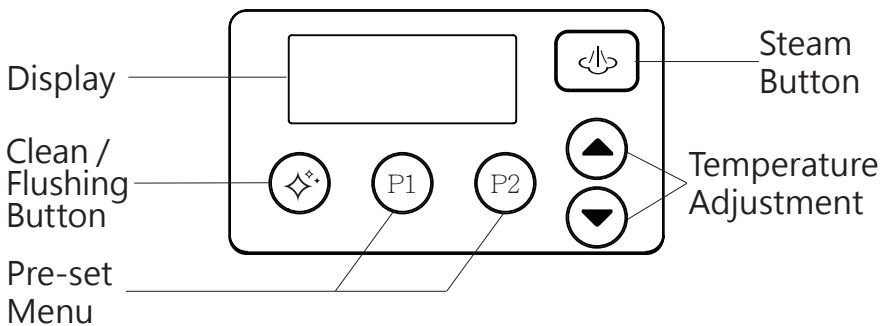

Reminder

Press and simultaneously to switch from Fahrenheit(° F) to Celsius(° C) conversion.

 
Operation Guidelines of MS-130T

1. Switch on the Main Power Button (left lower side of machine)



2. Preheating

Monitor shows “_ _ _ _” for few minutes to represent preheating. When the machine is ready, previous target temperature is shown.



3. Temperature Setting

Setting Preset Menu

- Pressing and holding P1 / P2 button, the machine shows its preset temperature.
- Press  or  to adjust target temperature.
- Release P1 / P2 button, machine beeps three times to show successfully saving
- Press P1 / P2 button to set target temperature rapidly.

Reminder
Temperature setting range: 40° C - 90° C (104° F - 194° F)

Setting Normal Target Temperature

Press  or  to adjust target temperature.

Attention
After each use, target temperature returns to previous setting. But, it will be rewritten after pressing P1 / P2 button.

4. Start Milk Frothing

- Setting target temperature, press  to start frothing. Liquid temperature will be shown in the display.
- During frothing, the display shows rising temperature. When target temperature is reached, machine automatically stops steam dispensing.

Reminder
User can stop steam dispensing with  button.

Warning
Hot Water Caution! Pressure outlet may drain out hot water after steam dispensing!

5. After frothing

 
 
Machine returns to ready mode and display shows previous target temperature.

Caution

Do not remove steam wand from liquid before completely shutting down.

6. Clean after use

Press  to start flushing. Machine dispenses steam for 6 seconds to clean milk residual inside steam wand. Then wipe the steam wand clean with a damp cloth to clean milk residual on the surface of the steam wand.

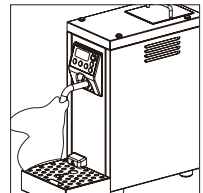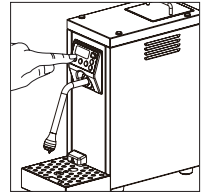

Attention

Prevent blockage of steam wand, users **MUST** flush the machine after each use.

Attention

The maximum time of steam release is 4 minutes. If the liquid does not reach the target temperature after 4 minutes, it will automatically stop to release of steam.

 
Situations below are not accepted in the maintenance terms:

1. Formation of scale in thermoblock due to not using distilled water or inadequate and irregular cleaning.
2. Blocking in steam wand due to inadequate and irregular cleaning.

Recipes


Hot Milk

1. Add 200ml milk
2. Heat up to 65 ° C

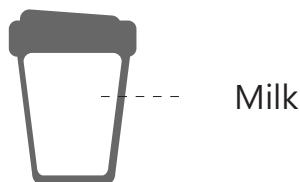


Hot Chocolate

 1. Add 200ml milk
2. Add 15g chocolate powder
3. Add adequate amount of sugar
4. Heat up to 80 ° C

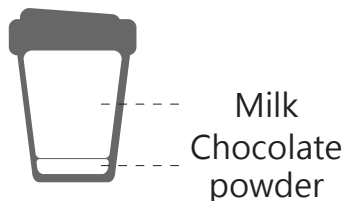

Greentea Latte

 1. Add 200ml milk
2. Add 6-8g matcha powder
3. Add adequate amount of sugar
4. Heat up to 80 ° C

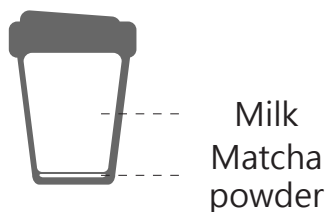

Welhome's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR WELHOME ESPRESSO MACHINE

1. Please read this instruction manual carefully before using machine.
2. Always place the unit on a flat surface
3. Do not operate with empty water tank. Fill in the water tank only with clean.
4. The steam wand became very hot after texturing milk. Do not touch the hot steam wand directly after operation.
5. Always disconnect the plug from the power outlet before cleaning machine or if there is any problem during the texturing process.
6. Do not allow the contact of power cord with any heating devices, such as steam wand, as these surfaces is subject to residual heat after use.

7. Do not place hands under the steam nozzle directly, as it can lead to a scalding or injury.
8. Switch off all the power button before remove the plug. Do not pull on the cord.
9. Do not use your appliance with an extension cord unless the cord has been checked and tested by qualified technician or service person.
10. Always use your appliance under a power outlet of the voltage (A.C. only) marked on the appliance.
11. Close supervision is necessary when your appliance is being used near children or infirm people.
12. Never leave an appliance unattended while in use.
13. Do not use an appliance on or near a hot gas flame, electric element or on a heated oven. Do not place on top of any other appliance.
14. Do not hang over the power cord at the edge of table or bench top or contact with any hot surface.
15. Do not operate any electrical appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, please return the appliance to the nearest Welhome Appointed Service Centre for examination, repair or adjustment.
16. Be careful about spillage on the connector.
17. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
18. The appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;

 
- By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
19. The instructions for appliances normally cleaned after use, and must not intend to be immersed in water for cleaning.
 20. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 21. Never clean the steam wand with an abrasive pad as this will damage the steam wand.
 22. Clean the steam wand immediately after use because dried milk may block the steam nozzle.
 23. Be careful to potential injury from misuse.
 24. Be careful to heating element surface that is subject to residual heat after use.
 25. The appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years old.
 26. The surfaces are liable to get hot during use.
 27. It is **COMPULSORY** to **PURGE** the milk steamer **IMMEDIATELY** after every milk steam.
 28. **FAILURE** to **PURGE** the **STEAM WAND** will cause a **BUILD UP OF MILK** within the steam wand which will **PREVENT** the steamer from **OPERATING** in the **CORRECT MANNER**.
 29. **FAILURE** to **PURGE** the milk steamer will **VOID** the **WARRANTY**.

Failure to observe caution may result in personal injury!

These instructions shall also be available by contacting Welhome hotline.

Care and Cleaning


With unique dispensing pattern, the machine can be cleaned thoroughly. Cleaning agents are highly recommended to use. Please refer to manual of cleaning agents for detailed operation.

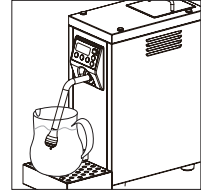

1. Check and ensure water tank is filled.

2. Place a heat-resistant large container beneath nozzle.

 3. Press  and hold for 3 seconds to start cleaning mode and display shows .

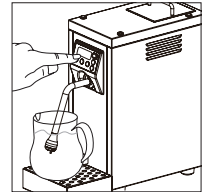

4. Press  to start cleaning. Rhythmic hot water dispensation program start.

**Be careful
of burns!**

Warning:
hot water
temperature
40°C - 60°C

5. Program stops when water tank is empty and display shows . User can refill water to keep cleaning or press  and hold for 3 seconds to leave cleaning mode.
6. The machine will restart automatically for next use.

Reminder

Ensure all cleaning agent are drained out after cleaning.

Drip Tray

Remove the drip tray and water tray to empty. Clean with water and a little non-abrasive washing up liquid, rinse and dry.

Product Specifications

Product name: Milk Steamer

Product model: MS-130T

Voltage and Power:

120V~ 60Hz 1450W

Attention: Product are subject to change without prior notice.

Attention: Users can refer online manual on WPM website (wpm.hk)

Situations below are not accepted in the maintenance terms:

1. Formation of scale in thermoblock due to not using distilled water or inadequate and irregular cleaning.
2. Blocking in steam wand due to inadequate and irregular cleaning.

G.M.P Industrial Co. Ltd.

Address: 7/F, Meyer Industrial Building, 2 Chong Yip Street,
Kwun Tong, Kowloon, Hong Kong

Tel. No.: +852 23438211

Fax: +852-23431647

E-mail: welhome@gewcorp.com

Website: wpm.hk

WPM
WELHOME PRO

Ver.Cod.:MS-130T-UL-IB-V003-2302131145