


WPM

WELHOME PRO

Coffee Grinder
ZD-10 / ZD-10T

Operation Description

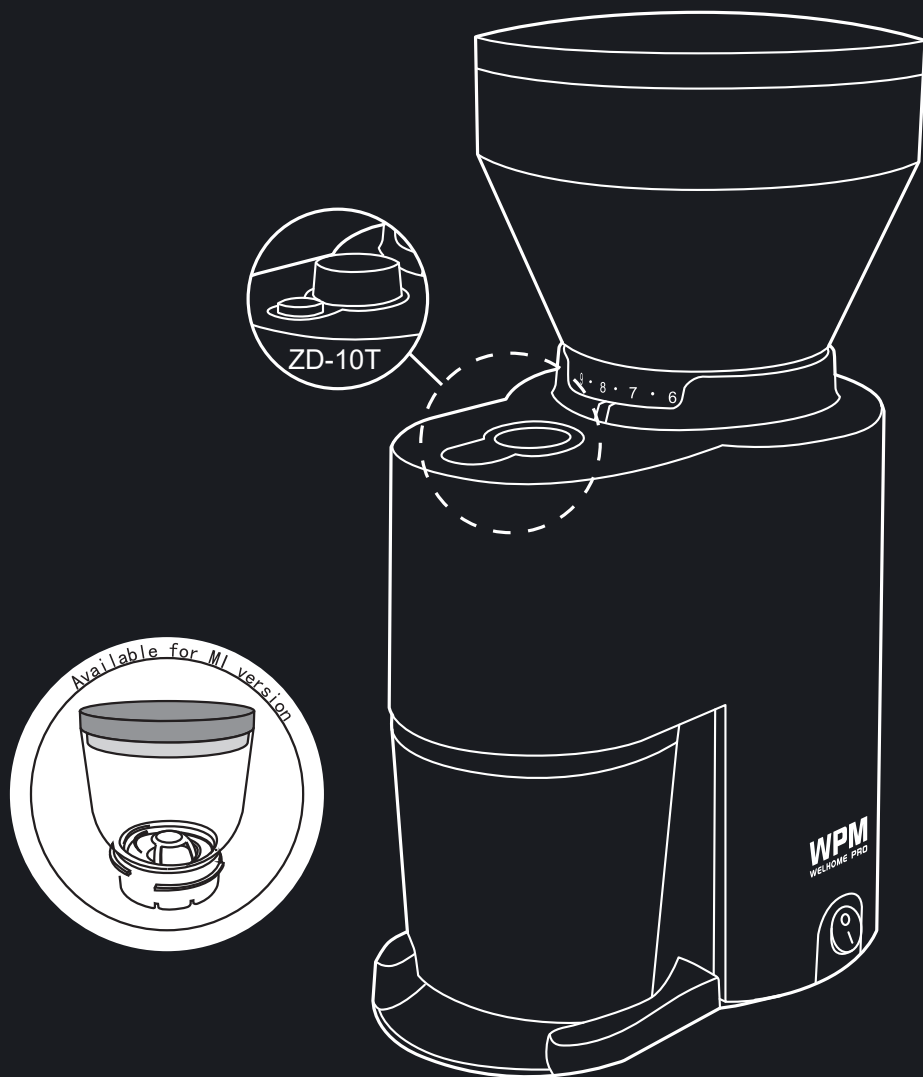

Content

Independent Part Diagram & Control Position	1
ZD-10 Operation Flow	2
ZD-10T Operation Flow	3
WELHOME'S Safety precautions	5
Care and Cleaning	7
Recycling and Disposal	8
Product Specifications	9

**Thank you for purchasing Espresso Machine by WPM.
Please read this manual carefully before using the machine.**

Independent Part Diagram & Control Position

Large Hopper Lid*

Small Hopper Lid#

Please refer to the object as standard




OR



Hopper Sealing

Large Hopper*

Small Hopper#

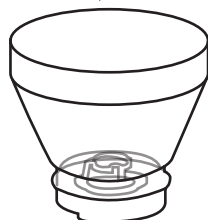

OR




Top Burr

Powder Tray Cover



Powder Tray

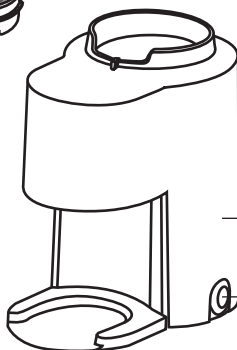


ZD-10
No Timer Version

Plastic Grinder Body

Main Power
Rocker Switch

Timer Control Knob

Start / Stop Button

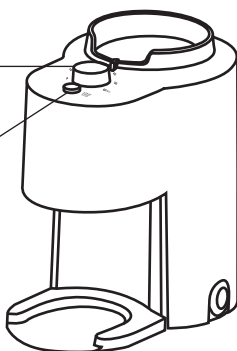

ZD-10T
With Electrical
Timer Version


* Large hopper and hopper lid are available in:

ZD-10(BL) / ZD-10(GR) / ZD-10(OR) /
ZD-10(YW) / ZD-10(LB) / ZD-10(RB) / ZD-10(RD) /
ZD-10T(BK) / ZD-10T(LB) / ZD-10T(GD) / ZD-10T(SV) / ZD-10T(WH)

Large hopper and hopper lid are available in: ZD-10-MI(BL) / ZD-10-MI(GR) /
ZD-10-MI(OR) / ZD-10-MI(YW) / ZD-10-MI(LB) / ZD-10-MI(RB) / ZD-10-MI(RD) /
ZD-10T-MI(BK) / ZD-10T-MI(LB) / ZD-10T-MI(GD) / ZD-10T-MI(SV) / ZD-10T-MI(WH)



Note: Installation and use of large and small hopper are same. This manual is explained by large hopper and its lid.

ZD-10 Operation Flow

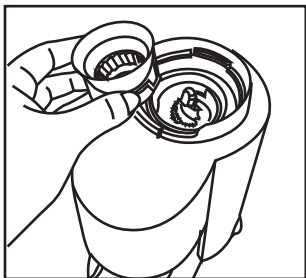



1. Ensure "Main Power Cord" is unplugged and "Rocker Switch" is off.
2. Insert "Hopper Sealing" and "Top Burr" together and place into "Plastic Grinder Body".

3. Insert "Hopper" onto "Plastic Grinder Body" by according to the mark.

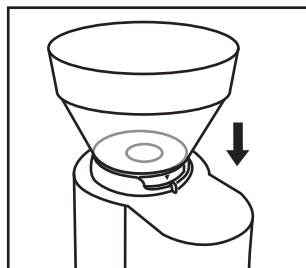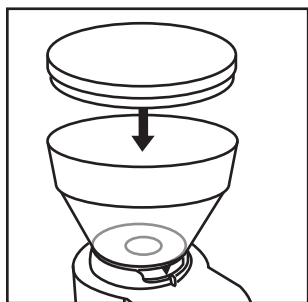

4. After filling with coffee beans into "Hopper", place "Hopper Lid" for hopper covering and insert "Powder Tray" with "Powder Tray Cover".

5. Rotate "Hopper" to silk screen area for triggering the safety switch and adjust corresponding grind level.

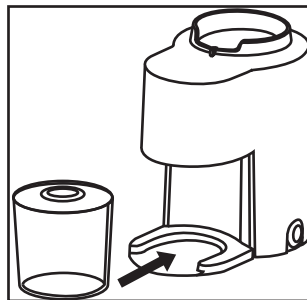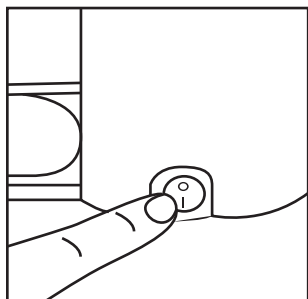


6. Plug power cord and tact on "Rocker Switch" for starting operation.
7. Tack off "Rocker Switch" for stopping operation.

Note:



To avoid overheat, operate the appliance for NOT more than 1 minutes continuously. Wait 5 minutes for cooling down before re-using of the appliance.

ZD-10T Operation Flow

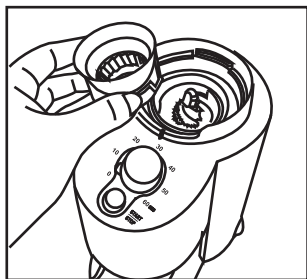



1. Ensure "Main Power Cord" is unplugged and "Rocker Switch" is off.
2. Insert "Hopper Sealing" and "Top Burr" together and place into "Plastic Grinder Body".

3. Insert "Hopper" onto "Plastic Grinder Body" by according to marking position.

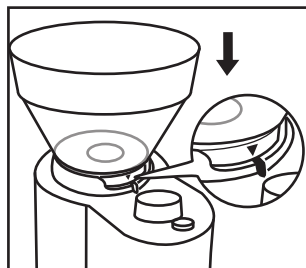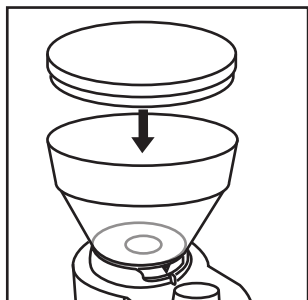


4. After filling with coffee beans into "Hopper", place "Hopper Lid" for hopper covering and insert "Powder Tray" with "Powder Tray Cover".

5. Rotate "Hopper" to silk screen area for triggering the safety switch and adjust corresponding grind level.

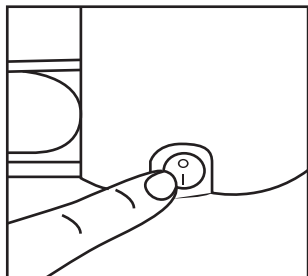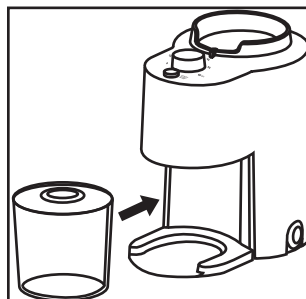

6. Plug power cord and tact on "Rocker Switch" for start operation.

7. Turn “Timer Control Knob” to set the desired operation duration and then push “Start/ Stop Button” to activate. 6 discrete settings from 10 to 60 seconds can be chosen.

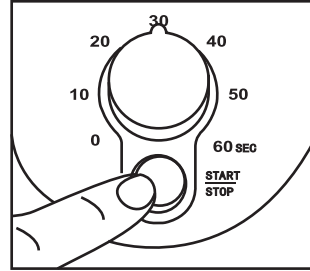

8. Tact on “Start / Stop Button” again for suspending process during grinding operation.
9. After operation is completed/stopped, tact off “Rocker Switch” for power cut off.

Note:

To avoid overheat, operate the appliance for NOT more than 1 minutes continuously. Wait 5 minutes for cooling down before re-using of the appliance.

WELHOME'S Safety precautions

SAFETY PRECAUTIONS FOR YOUR WELHOME COFFEE GRINDER

- Check the hopper for the presence of foreign objects before using.
- Always operate the grinder with the hopper properly inserted in the grinder.
- Do not place your hand in or near the burrs while the grinder is in operation.
- Always place the unit on a flat, level surface.
- Switch off and unplug at power point before cleaning.
- Do not attempt to re-grind ground coffee.
- Switch off the appliance and disconnect from power supply before touching any part of the grinder that moves during use.
- Accessories, other than those supplied with the appliance, shall include instructions for their safe use.

WELHOME is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:

- Read carefully and save all the instructions provided with an appliance.
- Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
- Turn the power off and remove the plug when the appliance is not in use and before cleaning.
- Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
- Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
- Do not use an appliance for any purpose other than its intended use.
- Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
- Do not place on top of any other appliance.
- Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
- Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest WELHOME Appointed Service Centre for examination, repair or adjustment.
- For additional protection, WELHOME recommend the use of a residual current device (RCD with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
- Do not immerse the appliance in water or any other liquid unless recommended.
- Appliances are not intended to be operated by means of an external timer or separate remote control system.

- Children should be supervised to ensure that they do not play with the appliance.
- The temperature of accessible surfaces may be high when the appliance is operating.
- Never leave an appliance unattended while in use.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- To avoid overheat, operate the appliance for NOT more than 1 minutes continuously. Wait 5 minutes for cooling down before re-using of the appliance.

Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.



DISPOSAL: Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary.


This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances.

By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.

Care and Cleaning

Ensure the coffee grinder is switched off and unplugged from the power outlet prior to cleaning.





1. Cleaning the grinder body, bean hopper and coffee container
 - a. Remove the exceed coffee bean, and store into an airtight container to preserve their freshness.
 - b. Wipe the grinder body with a damp cloth and dry.
 - c. Wash the bean hopper and coffee container in warm soapy water, then rinse and dry.

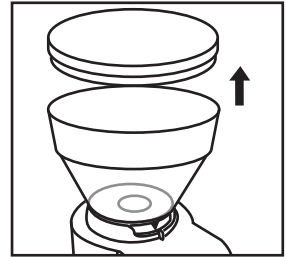

2. Cleaning the burrs

After the frequently use of coffee grinder, the burrs need to be cleaned every three weeks to ensure best performance of the coffee grinder. Regular cleaning helps the burrs to achieve consistent grinding results, which is especially important for grinding espresso.

- a. Ensure the coffee grinder is switched off and unplugged from the power outlet. Rotate the hopper in anticlockwise direction for releasing.
- b. Remove the bean hopper when the printed arrow is aligned with the point on grinder body.
- c. Lift out the top burr and hopper sealing from the device.
- d. Clean the top burr, hopper sealing and bottom burr by the provided cleaning brush.
- e. After cleaning, place back the top burr and hopper sealing to its position.
- f. Align the printed arrow on the hopper with the point on the grinder body.
- g. Rotate in clockwise direction to desired grind setting.

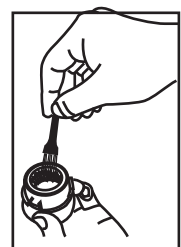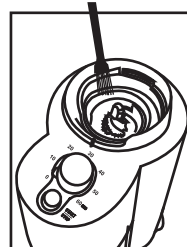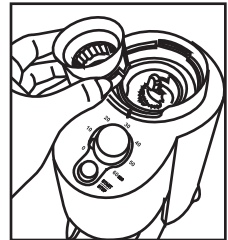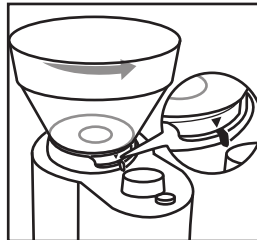

Recycling and Disposal

Disposal of the Packaging

The packaging protects the unit against transport damage. The packing materials are selected according to the environmental compatibility and disposal-related aspects and can therefore be recycled.

The return of packaging into the material cycle saves raw material and reduces the waste volume.



Disposal of the Unit

At the end of its service life, this product cannot be disposed of in normal domestic waste. The symbol on the product and in the operating instructions point out to this fact. The materials are recyclable according to your marking. With the reuse, recycling or other forms of recycling of old equipment, you make an important contribution to the protection of our environment. Please ask your municipal administration for the disposal point.



Product Specifications

Product Name :

Coffee Grinder

Model No. :

ZD-10

ZD-10T



Voltage / Power :

220-240V~ 50/60Hz

140-150W

Made in China

Product is subject to change without prior notice

G.M.P. Industrial Company Ltd.

Tel. No.: +852 23438211

Website: www.wpm.hk

E-mail: welhome@gewcorp.com

Address: 7/F, Meyer Industrial Building, 2 Chong Yip
Street, Kwun Tong, Kowloon, Hong Kong

WPM

WELHOME PRO

Ver. Cod.: ZD-10Series-OS-IB-V001-202106091040



12 Month Repair Guarantee